



KAISSA

Quick User Guide
V1 Rev 2 (September 2012)



First of all, thanks for purchasing our new Kaissa chess clock. It has been designed under the Design for All guidelines, in order to achieve a totally accessible product.

KAISSA Works Under two main modes :

- **PLAY MODE** : Normal playing situation.
- **PROGRAMMING MODE**. Program playing parameters.

KAISSA needs 4*AA batteries to work. You'll find the battery holder at the bottom of the product.

PLAY MODE

When powering ON (ON-OFF switch is located at the bottom of the device), Kaissa enters automatically in **PLAY MODE** and **GAME STOPPED**..

KAISSA will show you the remaining **TIME** for each player. (The remaining time depends on the actual **PLAYING MODE**, see Programming Mode for more information).

START GAME	Push D Key to start the game.
STOP GAME	Push and hold 2 seconds the D key.
SPEAK PLAYER 1	Push A Key to listen your time.
	Push B Key to listen opponent time.
SPEAK PLAYER 2	Push F Key to listen your time.
	Push E Key to listen opponent time.
CURRENT PLAYER	Pushing the upper side Lever.

PROGRAMMING MODE

(Note : all the programming messages are sent via speech to player 1).

START PROGRAMMING MODE	When KAISSA is in GAME STOPPED mode , push and hold 2 seconds the C Key.
STOP PROGRAMMING MODE	When KAISSA is in PROGRAMMING MODE mode , push and hold 2 seconds the D Key.
GO TO NEXT PROGRAMMING PARAMETER	When KAISSA is in PROGRAMMING MODE mode , push C Key.

PROGRAMMING TIMES	<p>With the Lever position, we control the player whose time is being modified.</p> <p>A and B Keys : move the cursor to the right or to the left to select digits to change.</p> <p>E Key : decrement of the selected digit. F Key : increment of the selected digit.</p> <p>When you push the key C you can program the moves.</p> <p>E Key : decrement moves. F Key : increment moves.</p>
<p>PROGRAMMING MODES</p> <p><i>Display example:</i></p> <p>061000 020040</p> <p>PLAYING MODE 06 FIRST CONTROL TIME 1 BONUS MODE 0 BONUS 00</p> <p>HOURS (1ST CONTROL) 02 MINUTES (1ST CONTROL) 04 MOVES 00</p>	<p>Modes 0..7 fixed. No programmables. Modes programmables : 8..15.</p> <p>Lever at left position : Change of <u>Playing mode</u> (00..29), change of <u>control time</u> (1,2,3), <u>bonus mode</u> (0,1) (0: Increment bonus after move, 1 : Increment bonus before the move) and <u>Bonus</u> (Seconds).</p> <p>Lever at right position : Change of control time (Hours and minutes) and moves.</p> <p>A and B Keys : move the cursor to the right or to the left to select digits to change.</p> <p>E Key : decrement of the selected digit. F Key : increment of the selected digit.</p>
PROGRAMMING LANGUAGES	<p>Lever at left position : A and B keys select the Player 1 language. Lever at right position : E and F keys select the Player 2 language.</p>
PROGRAMMING VOLUME	<p>Lever at left position : A and B keys select the Player 1 volume. Lever at right position : E and F keys select the Player 2 volume.</p>
PROGRAMMING SOUND (SET BUZZER IN DISPLAY)	<p>A Key : Decrement B Key: Increment 00 Sound off 01 Sound on 02 Activate moves info while playing</p>
BATTERY STATUS	Shows the Battery status.

PROGRAMMING MODES

Modes 0..7 fixed. No programmables

MODO 00 : *One time control.*

01h:30m and Bonus increment of 30s after move.

MODO	CONTROL	CONTROL BONUS	BONUS	HORAS	MINUTOS	JUGADAS
00	1	0	30	01	30	00
00	2	0	00	00	00	00
00	3	0	00	00	00	00

MODO 01 : *Two times control.*

First Control time : 01h:30m and Bonus increment of 30s after move.

Second Control time: 01h:00m and Bonus increment of 30s after move.

MODO	CONTROL	CONTROL BONUS	BONUS	HORAS	MINUTOS	JUGADAS
01	1	0	30	01	30	00
01	2	0	30	01	00	00
01	3	0	00	00	00	00

MODO 02 : *Three times control.*

2h + 1h+ 30m

MODO	CONTROL	CONTROL BONUS	BONUS	HORAS	MINUTOS	JUGADAS
02	1	0	00	02	00	00
02	2	0	00	01	00	00
02	3	0	00	00	30	00

MODO 03 : *Two times control*

First Control time : 01h:30m and Bonus increment of 30s after move.

Second Control time: 00h:15m and Bonus increment of 30s after move.

MODO	CONTROL	CONTROL BONUS	BONUS	HORAS	MINUTOS	JUGADAS
03	1	0	30	01	30	00
03	2	0	30	00	15	00
03	3	0	00	00	00	00

MODO 04 : Two times control

100 minutes + 30 minutes with an increment of 30 seconds per move from move 1

MODO	CONTROL	CONTROL BONUS	BONUS	HORAS	MINUTOS	JUGADAS
04	1	0	30	01	40	00
04	2	0	30	00	30	00
04	3	0	00	00	00	00

MODO 05 : Three times control

2 hours + 1 hour + 15 minutes and 30 seconds per move in the last period

MODO	CONTROL	CONTROL BONUS	BONUS	HORAS	MINUTOS	JUGADAS
05	1	0	00	02	00	00
05	2	0	00	01	00	00
05	3	0	30	00	15	00

MODO 06 : Three times control

First Control : 02h:00m limited to 40 moves

Second Control: 01h:00m limited to 20 moves

Third Control : 00h:30m

MODO	CONTROL	CONTROL BONUS	BONUS	HORAS	MINUTOS	JUGADAS
06	1	0	00	02	00	40
06	2	0	00	01	00	20
06	3	0	00	00	30	00

MODO 07 : Three times control

First Control : 02h:00m limited to 40 moves

Second Control: 01h:00m limited to 20 moves

Third Control : 00h:30m and 30 seconds per move

MODO	CONTROL	CONTROL BONUS	BONUS	HORAS	MINUTOS	JUGADAS
07	1	0	00	02	00	40
07	2	0	00	01	00	20
07	3	0	30	00	30	00

Modes programmables : 8..15

MODO 08..15 :

Up to three programmable time controls.
Every control programmable.

Lever at left position

Lever at right position

MODO	CONTROL	CONTROL BONUS	BONUS	HORAS	MINUTOS	JUGADAS
08	1	0	00	02	00	40
08	2	0	00	01	00	20
08	3	0	30	00	30	00

PLAYING MODE

08 Playing mode

CONTROL TIME

- 1 First control time.
- 2 Second control time.
- 3 Third control time

BONUS MODE

0 POSTINCREMENT .Increment bonus after moves
1 PREINCREMENT. Increments bonus before moves

BONUS

00 a 59 seconds

HOURS

00 a 59 s Hours

MINUTES

00 a 59 m Minutes

MOVES

00 a 59 Moves to end the control time tiempo.

WARNING :

Use only 1.5V AA Batteries.

Take care of the batteries polarity when inserting new ones.

Don't leave the batteries on teh device for long inactivity periods.

InDoor use.

Manufacturer : FUNDOSA ACCESIBILIDAD

Model : KAISSA